

SAFETY FIRST......BE SURE TO THOROUGHLY READ THESE WARNINGS! FUEL IS FLAMMABLE AND DANGEROUS!

STRICT ADHERANCE TO THE SAFETY WARNINGS BELOW IS MOST IMPORTANT.

NOTE: Depending on the model fireplace you purchased, it will either require liquid bio-ethanol fuel or a gel fuel can which are made specifically for fireplaces.

Certain bullet points below may be specific to Liquid Fuel OR Gel Can Fuel however all warnings and safety precautions below should be read before use.

WARNINGS:

- Ethanol Fuel, Gel Fuel Cans and Fireplace should ONLY be handled BY ADULTS. Keep children at a safe distance and never let them operate the fireplace or handle the fuel.
- DO NOT allow children or pets near fireplace when burning.
- To insure safe use, you must carefully read and **adhere to ALL of the manufacturer's instructions**. These instructions should be kept for reference for as long as you own the fireplace and should be provided to anyone planning to use this ethanol fireplace.
- NEVER OPEN FUEL BOTTLE OR GEL FUEL CAN NEAR AN OPEN FLAME. A DANGEROUS FIRE FLASH COULD RESULT.
- When pouring the liquid fuel, NEVER overfill your fuel reservoir. NEVER fill fuel reservoir more than ¾ full.
 CLEAN UP ANY FUEL THAT MAY HAVE SPILLED and make sure any surface moisture from spillage is gone or has evaporated before lighting.
- When opening a Gel Fuel Can, be sure not to puncture the can or drop any gel fuel outside the can without cleaning it up before lighting.
- NEVER POUR LIQUID FUEL TO REFILL THE FUEL RESERVOIR WHILE THE FLAME IS BURNING OR UNIT IS HOT.
 Be sure the flame is extinguished and the reservoir has cooled down for 15 minutes before attempting to add more fuel.
- NEVER REMOVE THE GEL FUEL CAN WHILE THE FLAME IS BURNING OR UNIT IS HOT. Be sure it is extinguished
 and has cooled down for at least 15 minutes before attempting to remove or replace.
- When first lit, the flame may be nearly invisible. The same happens just before fuel runs out. At all times, be
 certain that fire is out before refueling. To be safe, always double check that no flame is present before
 refilling by closing lid or placing snuffer lid on top of fuel reservoir for at least one minute.
- Remove any bottles or cans away from the fireplace before lighting the fireplace. DO NOT touch the fireplace while it is burning or 15 minutes afterwards until it has cooled down
- Only use an extended lighter or long match to ignite. Never attempt to ignite with any other device.

- Never store Fuel in direct sunlight, or allow fuel to become heated. Always keep it in a dry cool area and store fuel a safe distance from fireplace, away from children. Keep fuel containers closed.
- NEVER LEAVE A BURNING FIREPLACE UNATTENDED.
- Never attempt to move the fireplace while it is lit (burning) or is still hot.
- Never place any objects in the fireplace or near the flame (flammable or non-flammable).
- KEEP FLAMMABLE OBJECTS AT LEAST 4 FT AWAY FROM FIREPLACE WHILE LIT OR HOT.
- Use only ethanol fuel made specifically for fireplaces. See www.anywherefireplace.com for recommended fuels. Burning common alcohol found in drug stores and home improvement stores is EXTREMELY DANGEROUS. Their emissions are toxic and not safe to inhale indoors or even outdoors.
- ALWAYS READ FUEL SAFETY INSTRUCTIONS AND FIREPLACE OPERATION INSTRUCTIONS THAT CAME WITH YOUR FIREPLACE

First Aid Measures should be found in the box in which the fuel came or on the exterior of the bottle.

IF YOU HAVE ANY QUESTIONS AFTER READING THESE SAFETY INSTRUCTIONS AND WARNINGS, DON'T HESITATE TO CONTACT US AT: INFO@ANYWHEREFIREPLACE.COM or 914-834-5855

WARNING!

IMPORTANT PRODUCT SAFETY INFORMATION ENCLOSED.

MUST READ BEFORE USING!

DO NOT THROW THIS OUT.

KEEP IN SAFE PLACE AND MAKE SURE ANY USERS READ THIS INFORMATION BEFORE USING the FIREPLACE! DO NOT THROW THIS OUT.

KEEP IN SAFE PLACE AND
MAKE SURE ANY USERS READ
THIS INFORMATION BEFORE
USING the FIREPLACE!